 


BINTALK™ Quick Install Guide

1. Connect your BinTalk sensor

Take your sensor out of the box and open the BarnTalk app. If you don't see the BinTalk sensor listed under your Gateway, tap the gear icon and choose "Add Sensor".

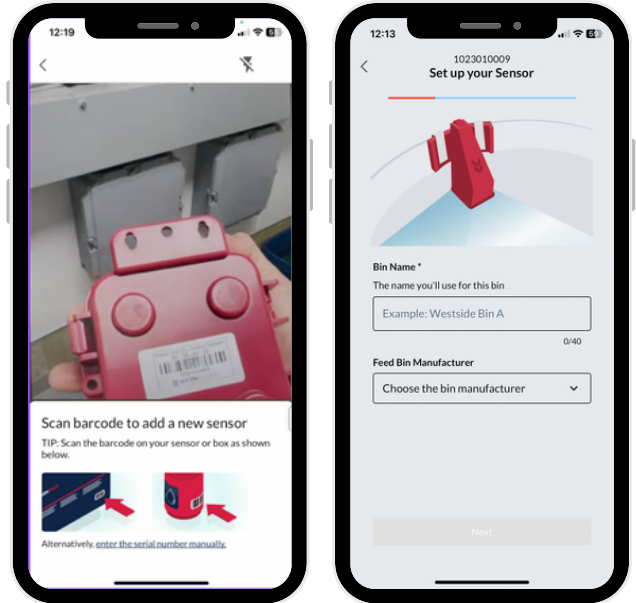

2. Enter your BinTalk settings

Next, follow the prompts in the app to fill out your bin details. We'll walk you through the rest with a few easy steps!

3. Clip your sensor to the bin collar

Attach the sensor straight up and down near the lid's hinges. Use the two self-tapping screws to secure it tightly.



.....
***NOTE:** BinTalk wakes within 6 hrs. of installing. For a faster reading within 1 hr, open the solar panel cover and press the pairing button.*

 
 If BinTalk is connected to your Gateway, 'L1' light will **flash green** after 10-15 seconds.

 If 'L2' **flashes red**, contact Support at 515-272-5122.

Just 2 More Steps 

4. Secure the solar panel
Attach the magnetic solar panel on the side with **the most sunlight**.

Route the cord outside the bin to prevent it from getting pinched.

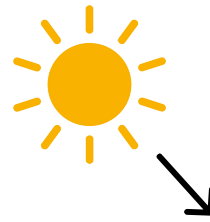


Place solar panel with the cord at the bottom.



5. Label your bin
Use a permanent marker to label the bin number and serial number. Stick it onto your bin, and you're all set!



 ADDITIONAL SUPPORT RESOURCES:

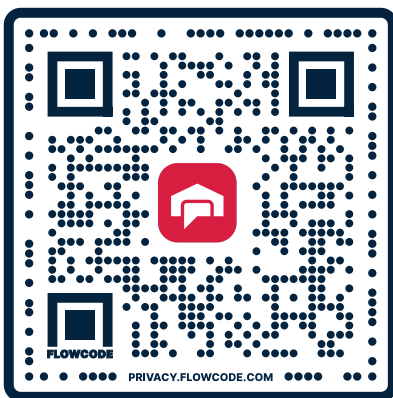

**Scan with
Phone Camera**

For more in-depth info on BinTalk, scan the QR code to access videos and a detailed support article.



Help Center and FAQs: support.barntools.com



Email our support team: support@barntools.com



Call or Text: **515-272-5122** | Call Toll Free: **855-580-0058**
During the hours of 8 AM - 5 PM CST Monday-Friday